

You can use the handset, speakerphone, or headset for calls. During a call, you can change modes by `pickara#n` .

Polycom VVX201 Handset

Use the dialpad keys to enter information

To type with the dialpad keys:

» **Press a key repeatedly to view the character options and stop to select**

To backspace, press `*`.

To type other characters:

» **Press `Encoding`**

When using the dialpad keys, use the `1`, `*`, `0` and `#` keys.

Place Calls

You can only have one active call in progress on your phone.

